



ASSEMBLY INSTRUCTION

















TOBERMORY DINING TABLE

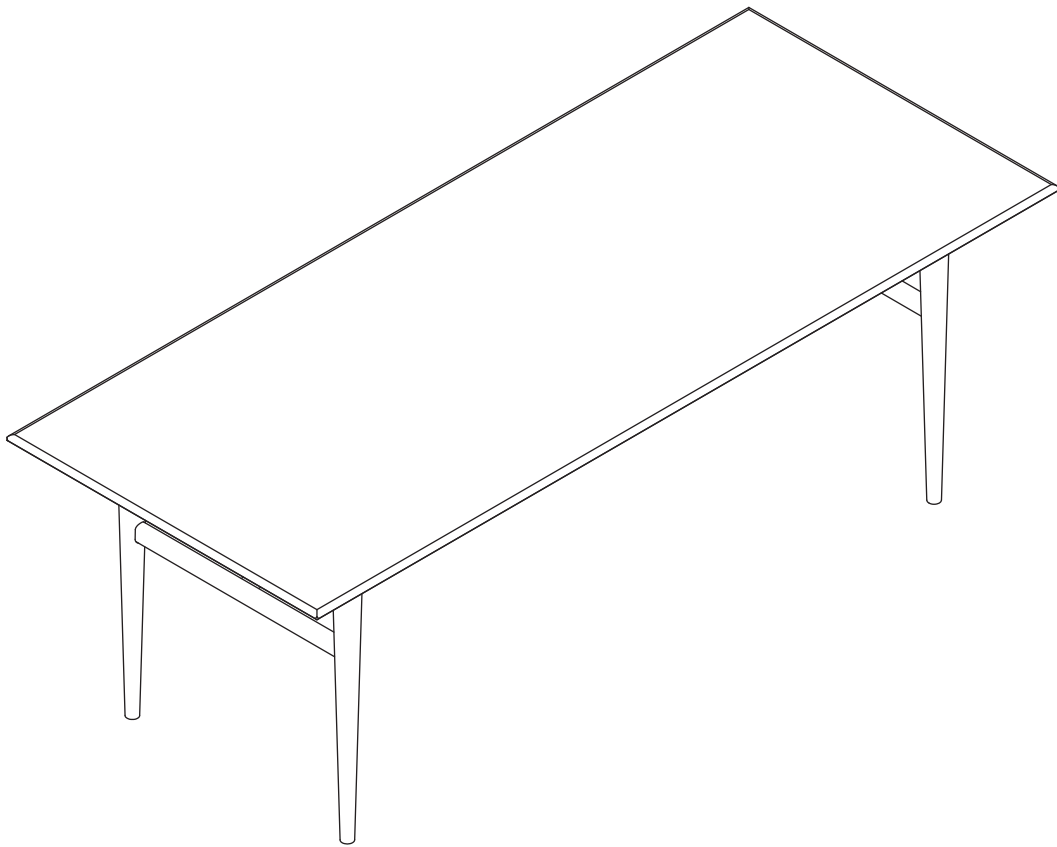


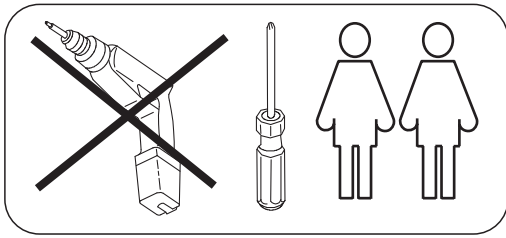
ROWICO

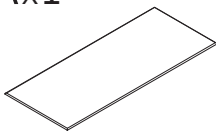H O M E

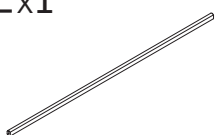
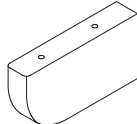


Ax1 	I x 8  M8/Ø19MM
Bx2 	Jx1  5MM
Cx2 	Kx4  Ø8x30MM
Dx2 	Lx6  Ø6x44MM
Ex1 	Mx6  Ø15x12MM
Fx4 	Nx4  Ø6x30MM
Gx8  M8x65	Ox8  Ø4x60MM
Hx8  M8	Px4  Ø25MM

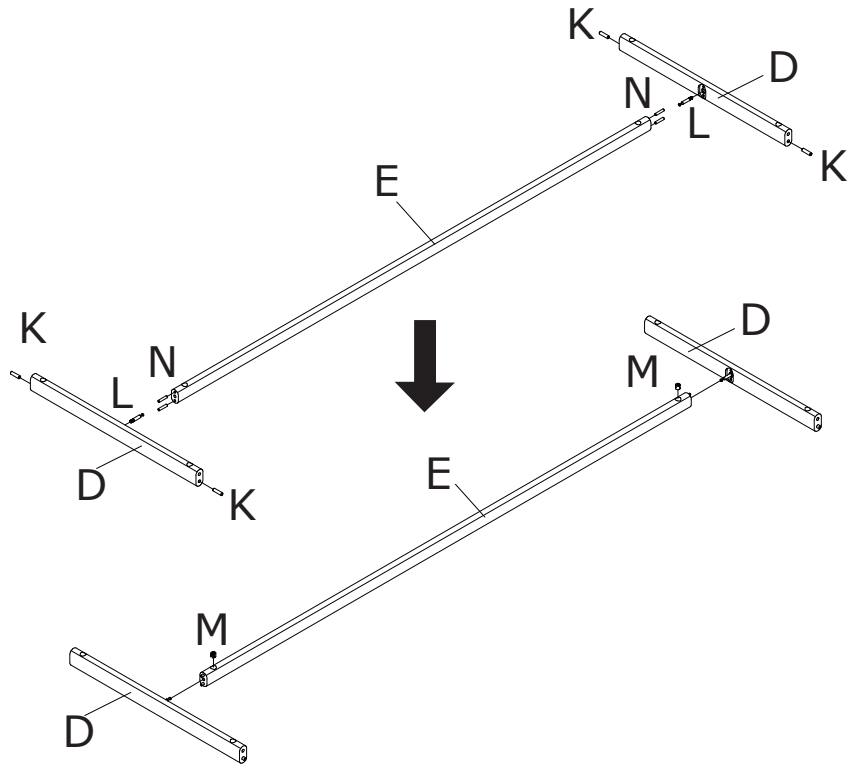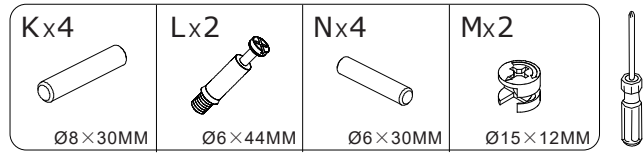



1

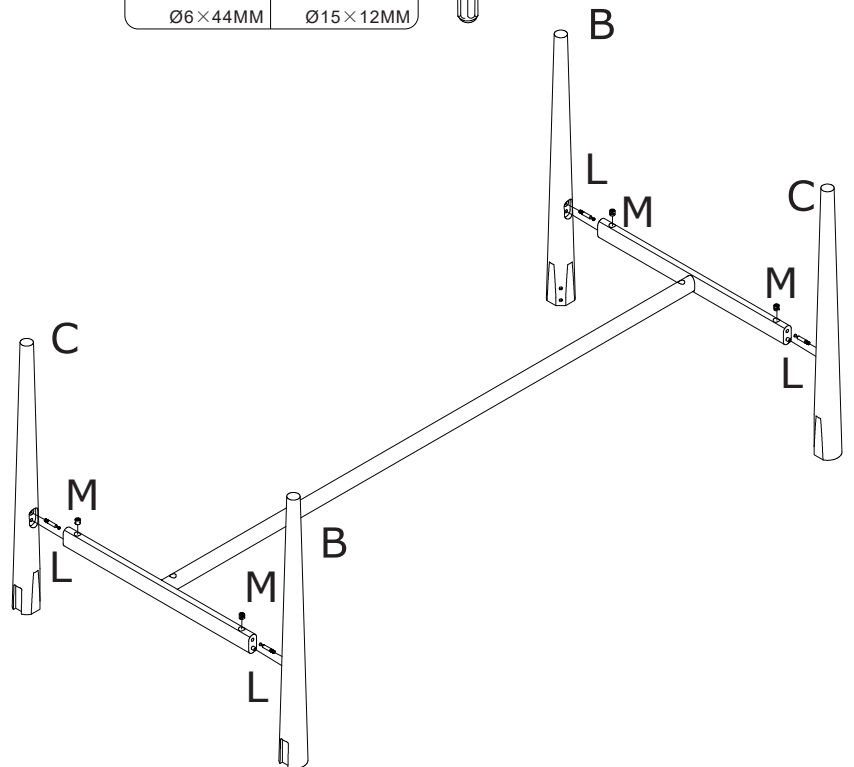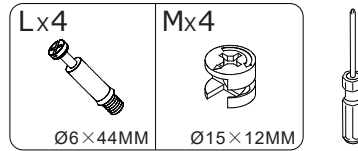


2






3

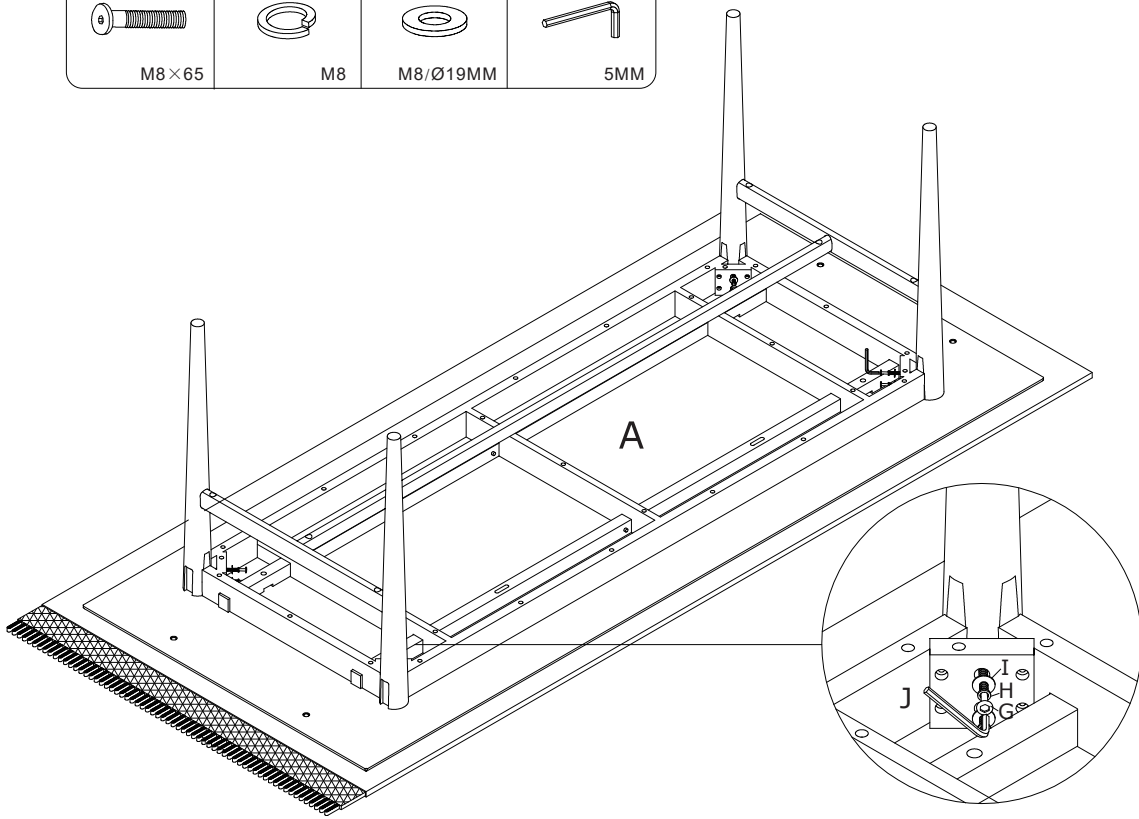Gx8  M8x65	Hx8  M8	Ix8  M8/Ø19MM	Jx1  5MM
---	--	--	---



4

Ox8  Ø4x60MM	Px4  Ø25MM	
---	---	---

